

**APARTMENT 9 OVEN AND STOVE TOP INSTRUCTIONS**



**TURN ON THE SWITCH ON THE RHS OF THE HOT PLATE**



**1. Hold your finger on this button for 3 plus Seconds**



**NOTE:** Please ensure the Hot Plates and your fingers are well Wiped Dry and Clean as the Hot Plates will not turn on otherwise


**3. Hold Finger on 3 for 1 Plus Second**

(This will turn on the Hot Plate)

**4. Hold Finger on plus or Minus to Change the Temperature up or down**

**5. If Hot Plates don't turn on Make sure the Lock Key is not on**

**6. PLEASE ENSURE THE HOT PLATE IS SWITCHED OFF WHEN NOT IN USE AT THE SWICTH**

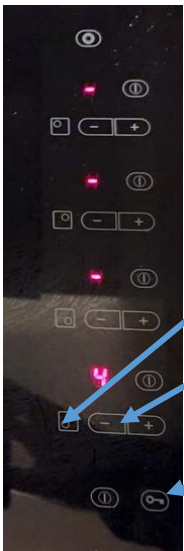

**THANK YOU**

